

JVISIONS BY OTHERS

<u>PLUMB HDISTWAY-</u> DUE TO CLOSE RUNNING CLEARANCES OWNER/AGENT MUST ENSURE THAT HDISTWAY AND PIT (WHERE PROVIDED) ARE LEVEL, PLUMB AND SQUARE AND ARE IN ACCORDANCE WITH THE DIMENSIONS ON THESE DRAWINGS.

VERHEAD CLEARANCE- OWNER/AGENT MUST ENSURE MINIMUM CLEARANCE IS IN COMPLIANCE WITH CODES.

CONSTRUCTION SITE- OWNER/AGENT TO PROVIDE ALL MASONRY,
CARPENTRY AND DRYWALL WORK AS REQUIRED AND SHALL PATCH AND
MAKE GOOD (INCLUDING FINISH PAINTING) ALL AREAS WHERE
WALLS/FLOORS MAY REQUIRE TO BE CUT, DRILLED OR ALTERED IN
ANY WAY TO PERMIT THE PROPER INSTALLATION OF THE LIFT.

IS DR/CUSTOMER TO VERIFY ALL DIMENSIONS AND REPORT ANY NCIES TO OUR OFFICE IMMEDIATELY.

PPORT WALL LOADS— STRUCTURAL ENGINEER TO ASSURE LDING AND SHAFT WILL SAFELY SUPPORT ALL LOADS BY THE LIFT EQUIPMENT. REFER TO THE TABLES ON THIS FOR LOADS IMPOSED BY THE EQUIPMENT.

JORS ARE REQUIRED- SUITABLE LINTELS MUST BE PROVIDED 2/AGENT. DOOR FRAMES ARE NOT DESIGNED TO SUPPORT) WALL LOADS. NE ROOM

*MACHINE ROOM

LOCATION / ACCESS-_ MACHINE ROOM LOCATED AT THE LOWEST
LEVEL ADJACENT TO HOISTWAY, UNLESS SHOWN OTHERWISE ON THE
LAYOUT DRAWINGS. FIELD ADJUSTMENT BY INSTALLER MAY BE
NECESSARY TO MEET JOB SITE CONDITIONS OR REGULATIONS. ACCESS
TO MACHINE ROOM TO BE THROUGH A SELF CLOSING LOCKING DOOR.

S FOR DIL & ELECTRIC LINES- FROM MACHINE ROOM TO AS REQUIRED, (POSITION PER INSTALLERS INSTRUCTIONS).

	15		115/1PH	CAB LIGHTS
17.0	30	60		
10.6	20	30		MOTOR INFO
SIZE (AMPS) FUSE (AMPS) CURRENT (AMPS)	FUSE (AMPS)	SIZE (AMPS)	(V/PH/CYCLE)	
DELAY FULL LOAD	TIME DELAY	DISCONNECT	INPUT VOLTAGE	

ORMATION IS SUBJECT TO CHANGE. REFERENCE OUR ON-LINE DRAWINGS AT Cordelevator.com FOR THE MOST RECENT UPDATES

THE INFORMATION DISCLOSED HEREIN IS THE EXCLUSIVE PROPERTY OF SQYQTQ. 0